


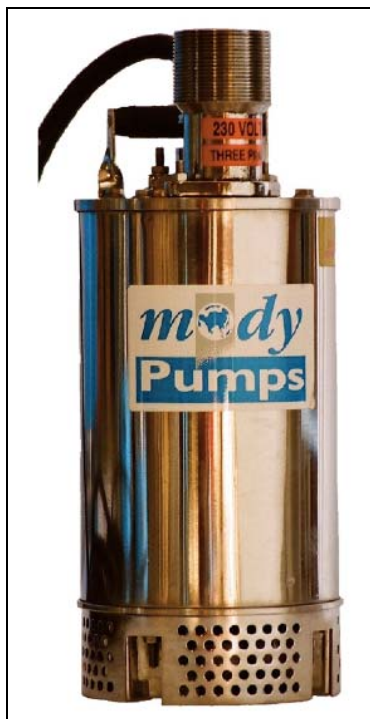

MODEL: M100T/316SS SERIES

**OPERATING INSTRUCTIONS, INSTALLATION & MAINTENANCE
MANUAL INCLUDING SPARE PARTS LIST**



Illinois Location:

(847) 841-7867
860 Church Rd Elgin, IL 60120

Minnesota Location:

(651) 758-7867
330 Mill Bay South Suite
Afton, MN 55001

PumpSupplyInc.com





LIFE IS PRECIOUS - THINK SAFETY

1. Most accidents can be avoided by using COMMON SENSE.
2. Please read the operation and maintenance instruction manual supplied with the pump. If you did not receive one, please call your local distributor before pump installation.
3. Do not wear loose apparel that may become entangled in the impeller or other moving parts.
4. Always use appropriate safety equipment, such as safety glasses, when working on the pump or piping.
5. Pumps build up heat and pressure during operation-allow time for pumps to cool before handling or servicing.
6. Only qualified service personnel should install, operate and repair pump.
7. Keep clear of suction and discharge openings. DO NOT insert fingers in pump with power connected.
8. Do not pump flammable or hazardous materials (gasoline, acids, alkalis, etc.)
9. Do not block or restrict discharge hose, as it may whip or burst catastrophically under pressure.
10. Make sure lifting handles/hooks are securely fastened each time before lifting.
11. Do not lift pump by the power cord under any circumstances.
12. Do not exceed manufacturer's recommendation for optimum performance, as this could cause the motor/pump to overheat and lead to premature wear or failure.
13. Secure the pump in its operating position so it does not tip over, fall or slide.
14. Keep away from impeller when power is connected.
15. Submersible Pumps are not approved for use in swimming pools, recreational water installations, decorative fountains or any installation where human contact with the pumped fluid is common.
16. Do not operate pump without adequate protection and safety devices in place.
17. Always replace safety devices that have been removed during service or repair.
18. To reduce risk of electrical shock, pump must be properly grounded in accordance with the National Electric Code and all applicable state and local codes and ordinances.
19. To reduce risk of electrical shock, always disconnect the pump from the power source before handling or servicing.
20. Any wiring of pumps should be performed by a qualified electrician.
21. Never operate a pump with a power cord that has frayed or brittle insulation.
22. Cable should be protected at all times to avoid punctures, cuts, and abrasions - inspect frequently.
23. Never handle connected - "hot" power cords with wet hands.
24. Never operate a pump with a plug-in type power cord without a ground fault circuit interrupter, adequate overload and short circuit protection.

IMPORTANT !!! MODY Pumps Inc. is not responsible for losses, injury, or death resulting from a failure to observe these safety precautions, misuse or abuse of pumps or equipment.

WARNING !!!



**Modu Single Phase Pumps Must be Run Using a
Capacitor Pump Panel.**

Wiring Schematic is at the end of this manual.

Run Capacitor (Rc): 35mfd, 370-440v. MARS # 12243

Start Capacitor (Sc): 215-259mfd, 220-250v. Mars # 11052

Potential Relay 130v: 111-134v pickup, 15-40v Dropout. MARS # 19550

OR

Potential Relay 332v: 244-270v pickup, 40-90v Dropout. MARS # 19551

Warranty is void if pump is operated without suitable Control Panel.

**DO NOT CONNECT POWER SUPPLY TO
PUMP DIRECTLY**

TECHNICAL DATA

MOTOR

2-POLE SQUIRREL-CAGE AC MOTOR CLASS 'H' INSULATION (180C°) FOR 3-PHASE OR SINGLE PHASE ELECTRIC SUPPLY. MOTOR RATED 1.3 HP (M100M/M100S/M) AND 2 HP (M120M/M126M) ROTATING AT 3450 RPM (APPROX.) AT 60 HZ SUPPLY AND 2850 RPM AT 50HZ.

PUMP	kW/HP	VOLTS	PHASE	HZ	F.L. AMPS	WEIGHT
M 100TSS	1/1.3	230/400/460	3	50/60	4/2.3/2	60lb./27kg
M 106TSS	1.5HP	230/460	3	60	4.4/2.2	60lb./27kg
M 100S/TSS	1/1.3	115/230	1	50/60	19/10	72lb./33kg
M 106S/TSS	1.5HP	115/230	1	60	19/10	72lb./33kg
M 120TSS	1.5/2	230/400/460	3	50/60	6.8/3.9/3.4	72lb./33kg
M 126TSS	2HP	230/460	3	60	6.8/3.4	72lb./33kg

CABLE

3 PHASE UNIT 50 Feet 14/4 SOOW CABLE.
 1 PHASE UNIT 50 Feet 12/4 SOOW CABLE.

DISCHARGE OUTLET

2" SS NPT. HOSE/BSPT TYPE OUTLET CAN BE SUPPLIED ON REQUEST.


MATERIALS

PUMP/MOTOR HOUSING STAINLESS STEEL
 IMPELLER STAINLESS STEEL
 RUBBER PARTS NITRILE RUBBER
 STRAINER STAINLESS STEEL
 HARDWARE STAINLESS STEEL

Illinois Location:
 (847) 841-7867
 860 Church Rd Elgin, IL 61

Minnesota Location:
 (651) 758-7867
 330 Mill Bay South Suite
 Afton, MN 55001

PumpSupplyInc.com



PUMP SUPPLY
 INCORPORATED


INSTALLATION AND MAINTENANCE.

- CHECK THAT THE SITE VOLTAGE AND POWER SUPPLY CORRESPOND TO THAT OF THE PUMP.
- CHECK THAT THE FUSES ARE INTACT.
- USE SHORTEST POSSIBLE HOSE OF THE CORRECT SIZE. AVOID CREASES, SHARP BENDS, AND CONTRACTIONS.
- NEVER LIFT OR PULL THE PUMP BY THE CABLE. USE THE LIFTING HANDLE ON THE PUMP. YOU MAY SUSPEND THE PUMP BY MEANS OF A ROPE OR PLACE IT ON A SOLID BASE.
- **THE MAXIMUM PUMP SUBMERGENCE RECOMMENDED IS 60 FEET/20m.**
- **THE SPECIFIC GRAVITY OF THE PUMPED FLUID SHOULD NOT EXCEED 1.1.**
- CHECK THE INSULATION RESISTANCE OF THE WINDING WITH RESPECT TO THE BODY. IT MUST BE MINIMUM 5 MEG-OHMS.
- CONNECT THE PUMP TO THE POWER SUPPLY BY MEANS OF A GROUNDED MALE PLUG.
- AT THE STARTING MOMENT THE PUMP SHALL MAKE A KICK, WHICH IS OPPOSITE TO THE DIRECTION OF THE IMPELLER. ENSURE DIRECTION OF ROTATION IS CORRECT. IN THREE PHASE UNITS IT IS SUFFICIENT TO INTERCHANGE ANY TWO LEADS OF THE CABLE TO CHANGE THE DIRECTION OF ROTATION. IN SINGLE PHASE UNITS THE DIRECTION OF ROTATION IS PRE-SET AT THE FACTORY.
- CHECK THE CURRENT DRAWN BY THE PUMP AT STARTING. IT SHOULD BE LESS THAN THE FULL LOAD AMPERE RATING OF THE MOTOR INDICATED ON THE NAME PLATE.
- **PUMP IS DESIGNED TO OPERATE IN FLUIDS WITH pH from 2 - 10.**

Illinois Location:
(847) 841-7867
860 Church Rd Elgin, IL 60120

Minnesota Location:
(651) 758-7867
330 Mill Bay South Suite 100
Afton, MN 55001

PumpSupplyInc.com



The image contains a map of Illinois and Minnesota. A star is placed in the western part of Illinois, and another star is placed in the western part of Minnesota. Below the map is the logo for Pump Supply Incorporated, which consists of a blue triangle containing the letters 'P' and 'S' in white, followed by the text 'PUMP SUPPLY INCORPORATED' in a bold, sans-serif font.

OVERLOAD PROTECTION.

IT IS ESSENTIAL THAT A STARTER BE USED WHEN OPERATING THE PUMP. CHOOSE THE CORRECT RATING OF STARTER AS PER THE NAME PLATE OF THE PUMP. THE OVERLOAD SETTING ON THE STARTER RELAY SHOULD BE SET TO THE FULL LOAD CURRENT OF THE PUMP AS INDICATED ON THE NAME PLATE. FOR SINGLE PHASE PUMPS A PANEL BOARD IS NECESSARY.

SPECIAL CONTROL BOXES SUITABLE FOR THE PUMP ARE AVAILABLE WITH US INCORPORATING ALL PROTECTIONS NECESSARY.

LUBRICATION.

NO ROUTINE MAINTENANCE OR LUBRICATION IS NECESSARY. THE BEARINGS ARE GREASE LUBRICATED AND SEALED FOR LIFE. THE MECHANICAL SEAL AND OIL SEAL RUN IN AN OIL BATH. NO TOPPING UP IS NECESSARY BUT THE CONDITION OF THE OIL SHOULD BE CHECKED ONCE IN SIX MONTHS. THIS IS BY FAR THE EASIEST WAY TO ASCERTAIN THE INTEGRITY OF THE SEAL FACES. (REFER OVERHAUL INSTRUCTIONS)

TROUBLE SHOOTING.

PROBLEM	PROBABLE CAUSE	REMEDY
<u>PUMP DOESN'T START</u>	1.FUSES BLOWN	REPLACE FUSES
	2.CABLE DAMAGED	REPLACE CABLE
	3.NO POWER	CHECK POWER SUPPLY
	4.BLOCKED IMPELLER	CLEAN IMPELLER
	5.WINDING BURNT	REPLACE STATOR/REWIND
<u>PUMP STARTS & STOPS</u>	1.BLOCKED IMPELLER	CLEAN IMPELLER
	2.IMPELLER ROT.BACKWARDS	REVERSE ROTATION
	3.CONN.FOR WRONG VOLTAGE	CHECK AND RECONNECT
<u>DISCHARGE TOO LOW</u>	1.IMPELLER ROT.BACKWARDS	REVERSE ROTATION
	2.PUMP WORN DOWN	REPLACE WEAR PARTS
	3.LONG HOSE & SMALL DIAM.	USE LARGER DIAM.HOSE
	4.DISCHARGE HEAD TOO HIGH	USE LARGER PUMP


GENERAL OVERHAUL(REFER DRG. DW/041/00-SHEET 1&2)


THE PUMP SHOULD BE OVERHAULED EVERY ONE YEAR (APPROX. 2500 WORKING HOURS) UNDER NORMAL WORKING CONDITIONS. IF THE WATER BEING PUMPED CONTAINS A HIGH PERCENTAGE OF SLUDGE AND ABRASIVES IT IS ADVISABLE TO DO THE OVERHAUL EVERY SIX/EIGHT MONTHS (APROX. 2000 HRS). THE OVERHAUL INCLUDES REPLACEMENT OF SHAFT SEAL, OIL SEAL, ETC., CHECKING THE ELECTRICAL SYSTEM, AND GENERAL INSPECTION OF WEAR AND OTHER PARTS.

Illinois Location:
 (847) 841-7867
 860 Church Rd Elgin, IL 61

Minnesota Location:
 (651) 758-7867
 330 Mill Bay South Suite :
 Afton, MN 55001

PumpSupplyInc.com





PUMP SUPPLY
 INCORPORATED

DISMANTLING (REFER DRG. DW/041/00-- SHEET 1 & 2).

PLEASE NOTE THE DIFFERENT DRAWING NUMBERS FOR VARIOUS MODELS IN THE SERIES.

- BACK OFF THE TWO DISCHARGE OUTLET NUTS (18,50) AND LIFT OFF THE OUTLET (23). PUT ASIDE THE OUTLET GASKET (36).
- BACK OFF FOUR NOS. NUTS (3,18) AND REMOVE THE STRAINER (21).
- BACK OFF FOUR NOS. NUTS (18) FROM THE STUD BOLT ASSY. (15) HOLDING THE DIFFUSER (20) AND REMOVE THE DIFFUSER.
- PULL OUT OUTER CASING (7) AND KEEP ASIDE.
- LOCK IMPELLER (19) BY MEANS OF IMPELLER LOCKING SPANNER OR PRYBAR TO PREVENT ROTATION AND UNSCREW IMPELLER DOME NUT (22). SLIDE IMPELLER OFF SHAFT. THE RUBBER SLINGER WILL COME OFF WITH THE IMPELLER. (IF TOOL IS NOT AVAILABLE, YOU MAY USE A GOOD STRONG SCREWDRIVER FOR LOCKING THE IMPELLER)
- REMOVE TRIMMING SPACERS (24) AND KEEP ASIDE.
- UNSCREW FOUR NOS. STUD BOLT ASSEMBLY (15) AND REMOVE WEAR PLATE (17).
- UNSCREW THE PHILLIPS SCREWS (56) HOLDING THE SAND GUARD (59) FROM SEAL HOUSING (16).
- UNSCREW OIL PLUG (25) AND REMOVE "O" RING (26) FROM CAVITY. DRAIN OUT THE OIL FROM THE OIL CHAMBER. THE CHAMBER CONTAINS APPROX. 150 ML OF OIL. CHECK IF THE OIL IS EMULSIFIED. IF SO, THE MECHANICAL SEAL IS WORN OUT AND NEEDS TO BE REPLACED. IF NO EMULSIFICATION HAS TAKEN PLACE THE MECHANICAL SEAL IS O.K. AND THE OIL CAN BE RE-USED.
- REMOVE CAP FOR CIRCLIP (58), CIRCLIP (55) AND SLIDE OUT COMPLETE MECHANICAL SEAL FROM THE ROTOR SHAFT. BE VERY CAREFUL WITH THE RUBBER BELLOWS AND THE SILICON CARBIDE SEAL FACE. LEAVE THE SILICON CARBIDE SEAT IN THE HOUSING UNLESS IT IS TO BE REPLACED.
- BY MEANS OF TWO SCREWDRIVERS LEVER OUT THE SEAL HOUSING FROM THE LOWER BEARING BRACKET (14)
- THE COMPLETE ROTOR WITH THE LOWER BEARING BRACKET AND BEARING CAN BE PULLED OUT OF THE STATOR CASING. USE TWO SCREWDRIVERS BETWEEN THE LOWER BEARING BRACKET AND THE STATOR CASING (8) AND PULL OUT THE COMPLETE ASSEMBLY.
- REMOVE THE UPPER SEAL IN THE SAME MANNER.
- UNSCREW HEX. BOLT (11) AND LOOSEN BEARING COVER (12). THE ROTOR COMPLETE WITH LOWER BEARING (13), CAN BE REMOVED FROM THE LOWER BEARING BRACKET.
- THE LOWER BEARING CAN NOW BE PRESSED OUT IF IT NEEDS TO BE REPLACED. EXAMINE UPPER BEARING FOR RADIAL OR AXIAL PLAY AND REPLACE IF NECESSARY.
- IF STATOR CHECKS OUT O.K. ELECTRICALLY AND THE CABLE IS O.K. DO NOT REMOVE THE TOP BRACKET FROM THE STATOR CASING. IF STATOR IS TO BE REWOUND THEN IT IS ESSENTIAL TO DISMANTLE GLAND ASSEMBLY.
- UNSCREW NUTS (41,42) AND REMOVE CABLE CLAMP (40). UNSCREW NUTS (18) AND PRY OFF CABLE GLAND (39). THE CABLE GROMMET (38) WILL COME OUT WITH THE GLAND. ALWAYS REPLACE CABLE GROMMET. REMOVE GLAND SPACER (37) AND PRY OUT CABLE GLAND BASE (31). REMOVE LEAD GROMMET (32) AND REPLACE. LOOSEN CABLE WIRES SO THAT ENOUGH SLACK EXISTS SO THAT THE TOP BRACKET CAN BE DISASSEMBLED.
- UNSCREW BOLTS (2) AND REMOVE HANDLE. THE TOP BRACKET (4) CAN BE REMOVED BY INSERTING TWO SCREWDRIVERS BETWEEN THE TOP BRACKET AND THE OUTER CASING AND PRYING THE SAME OUT OR TAPPING THE OUTLET WITH A RUBBER Mallet. DISCARD "O" RINGS.

Illinois Location:

(847) 841-7867
860 Church Rd Elgin, IL 60120

Minnesota Location:

(651) 758-7867
330 Mill Bay South Suite 100
Afton, MN 55001

PumpSupplyInc.com



RE-ASSEMBLY(REFER DRG. NO. DW/041/00-- SHEET 1 & 2).

- THE REVERSE OF LAST TWO STEPS (OF THE DIS-ASSEMBLY PROCEDURE) CAN BE FOLLOWED FOR ASSEMBLY OF THE TOP BRACKET AND THE GLAND ASSEMBLY. REMEMBER TO FIT "O" RING (6) IN THE TOP BRACKET.
- FIT THE TOP BEARING ON THE ROTOR. SLIDE BEARING COVER (35) ON ROTOR SHAFT AND FIT LOWER BEARING ON ROTOR BY MEANS OF A HAND PRESS OR ANY OTHER SUITABLE METHOD.
- INSTALL UPPER MECHANICAL SEAL STATIONARY SEAT(54) AND INSTALL ROTATING ASSEMBLY BY LIGHTLY GREASING SHAFT.
- FIT LOWER BEARING BRACKET ON LOWER BEARING ALIGNING THE TAPPED HOLES WITH THE HOLES IN THE BEARING COVER. FIT HEX BOLTS (11) AND TIGHTEN BEARING COVER AGAINST BEARING.
- THE COMPLETE ROTOR ASSEMBLY WITH THE LOWER BEARING BRACKET CAN NOW BE INSERTED INTO THE STATOR CASING. REMEMBER TO FIT THE "O" RING IN THE LOWER BEARING BRACKET BEFORE FITTING IN STATOR. ALIGN HOLES IN LOWER BEARING BRACKET WITH THE TAPPED HOLES IN THE STATOR CASING.
- FIT "O" RING IN SEAL HOUSING. FIT SILICON CARBIDE SEAL SEAT WITH SEAT CUP IN SEAL HOUSING AND PRESS HOME. ENSURE THE SEAT IS FITTING SQUARE IN CAVITY. FIT SEAL HOUSING IN LOWER BEARING BRACKET. ALIGN HOLES IN SEAL HOUSING WITH HOLES IN LOWER BEARING BRACKET.
- LIGHTLY OIL THE SILICON CARBIDE SEAT AND SLIDE MECHANICAL SEAL ON SHAFT. BE CAREFUL NOT TO DAMAGE THE BELLOWS OF THE SEAL. FIT CIRCLIP ON SHAFT AND LOCK THE SEAL. FIT SAND GUARD IN SEAL HOUSING.
- FIT WEAR PLATE IN RECESS OF SEAL HOUSING. FIT 4 STUD BOLTS THROUGH THE HOLES IN THE LOWER BEARING BRACKET AND SEAL HOUSING AND SCREW THE SAME IN THE STATOR CASING. THE NUT (WELDED) WILL SEAT IN THE RECESS OF THE WEAR PLATE.
- FIT RUBBER SLINGER ON IMPELLER HUB.
- SLIDE IMPELLER ON SHAFT AND ADJUST CLEARANCE BETWEEN THE IMPELLER AND WEAR PLATE BY MEANS OF THE TRIMMING SPACERS. THE IMPELLER SHOULD RUN FREE OF THE WEAR PLATE. PLACE THE LOCK WASHER AGAINST THE IMPELLER GUIDING THE TONGUE OF THE WASHER INTO THE IMPELLER KEYWAY. LOCK THE IMPELLER BY MEANS OF THE DOMENUT.
- SLIDE THE OUTER CASING OVER THE WEAR PLATE AND LOWER BEARING BRACKET TILL IT SITS AGAINST THE RECESS GUIDE OF THE TOP BRACKET. ENSURE THE "O" RING IS FITTED IN THE TOP BRACKET BEFORE FITTING THE OUTER CASING.
- FIT THE DIFFUSER THROUGH THE STUD BOLTS AND TIGHTEN AGAINST THE OUTER CASING BY MEANS OF THE NUTS. SEE THAT THE IMPELLER RUNS FREELY AND THE CLEARANCE BETWEEN THE DIFFUSER AND THE IMPELLER IS MINIMUM. IF ADJUSTMENT IS NECESSARY, THIS CAN BE DONE BY INCREASING THE TRIMMING SPACERS.
- PUT THE STRAINER ON THE STUD BOLTS AND TIGHTEN BY MEANS OF NUTS.
- MAKE THE ELECTRICAL CONNECTIONS AS REQUIRED AND THE EARTHING CONNECTION. FIT THE CABLE GLAND AND GLAND LOCK AND CLAMP THE CABLE. FIT THE OUTLET GASKET AND THE OUTLET. (ALWAYS REPLACE THE RUBBER PARTS OF THE CABLE GLAND ASSEMBLY --- DO NOT USE OLD RUBBER PARTS.)

Illinois Location:

(847) 841-7867

860 Church Rd Elgin, IL 60120

Minnesota Location:

(651) 758-7867

330 Mill Bay South Suite
Afton, MN 55001

PumpSupplyInc.com



RECOMMENDED SPARES FOR TWO YEARS OPERATION

<u>SR. NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>RECOMMENDED QTY.</u>
1.	MECHANICAL SEAL	535-033-00	2 NOS.
2.	"O" RING SET	375-100-74	2 SETS.
3.	CABLE GROMMET	260-034-66	2 NOS.
4.	CABLE LEAD GROMMET	260-016-66	2 NOS.
5.	UPPER BEARING	020-002-07	1 NO.
6.	LOWER BEARING	020-004-07	1 NO.
7.	IMPELLER (M100 60Hz)	300-060-24	1 NO.
8.	DIFFUSER	155-015-24	1 NO.
9.	WEAR PLATE	715-014-24	1 NO.
10.	DOMENUT	365-038-24	2 NOS.
11.	SLINGER	590-003-66	2 NOS

Illinois Location:

(847) 841-7867
860 Church Rd Elgin, IL 60120


Minnesota Location:

(651) 758-7867
330 Mill Bay South Suite 100
Afton, MN 55001

PumpSupplyInc.com



MODY DUAL VOLTAGE 1 Ph, 115/230V WINDING DIAGRAM.

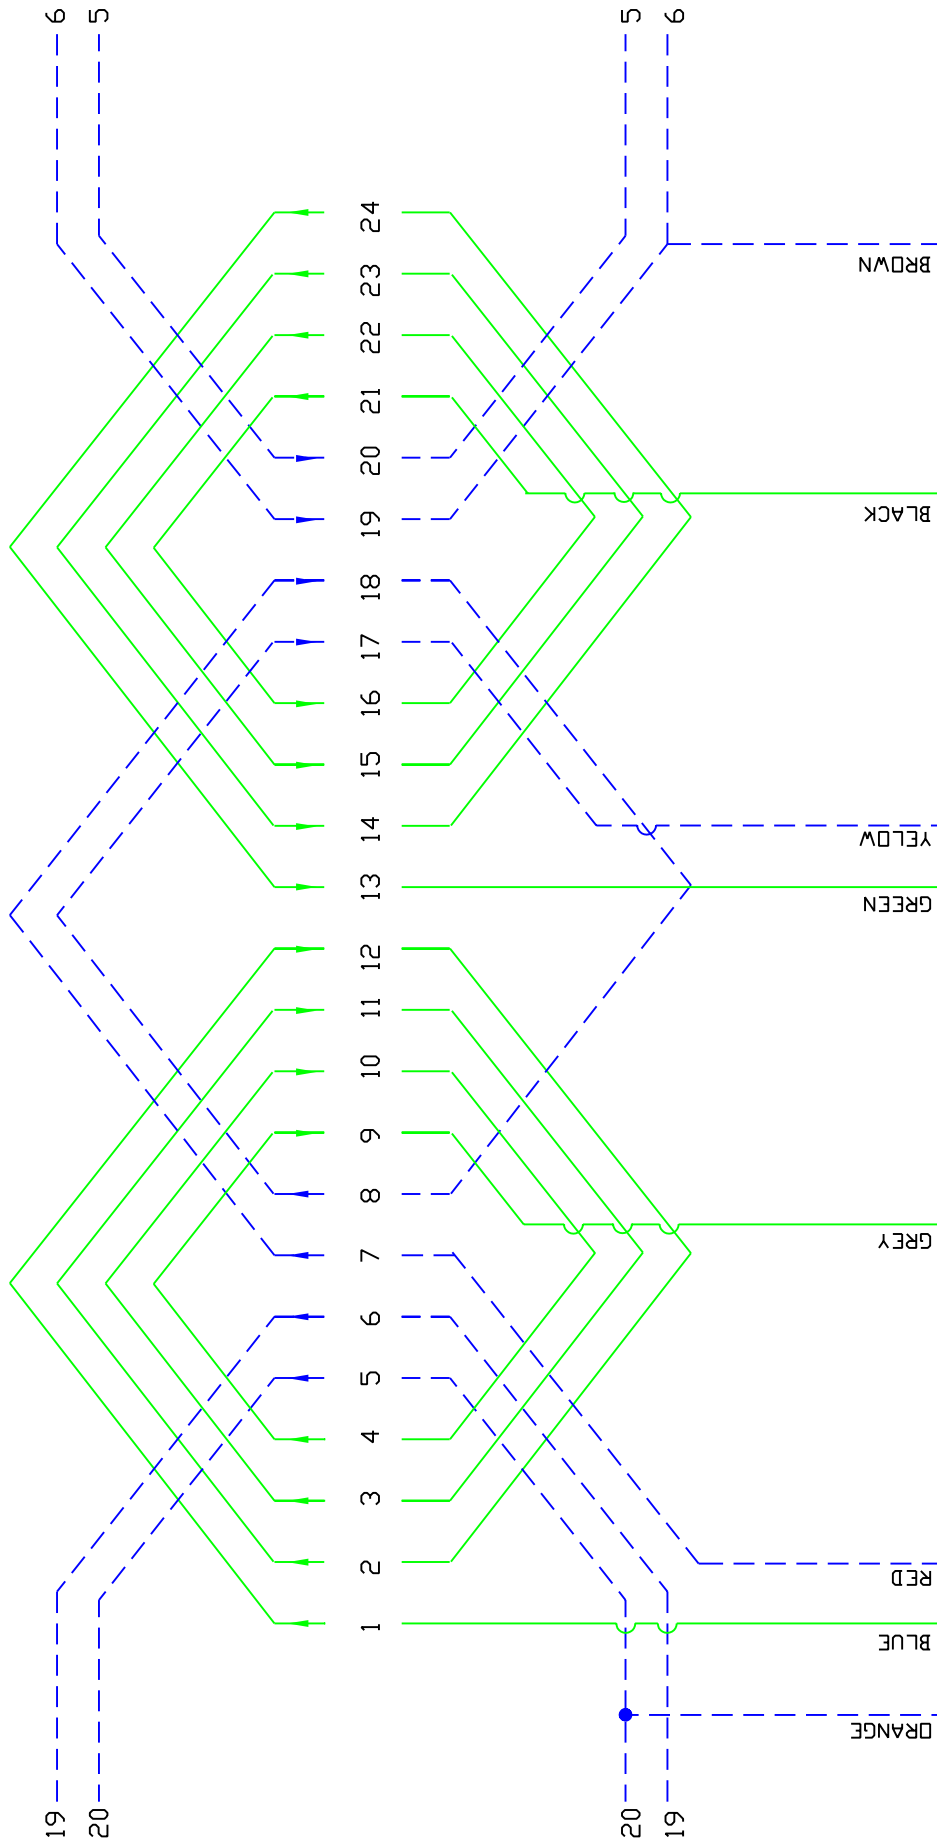


115 VOLT CONNECTION
 JOIN : GREY AND GREEN - RUN WINDING-BLUE CABLE
 JOIN : BLUE-BLACK-RED-ORANGE - COMMON-YELLOW CABLE
 JOIN : YELLOW-BROWN - START WINDING-RED CABLE

230 VOLT CONNECTION
 SHORT : YELLOW - ORANGE - PERMANENTLY
 BLACK - GREY - PERMANENTLY
 JOIN : BLUE-RED - COMMON-YELLOW CABLE
 JOIN : BROWN - START WINDING-RED CABLE
 JOIN : GREEN - RUN WINDING-BLUE CABLE



MODY DUAL VOLTAGE, 3Ph-230/460v 9 LEAD WINDING DIAGRAM



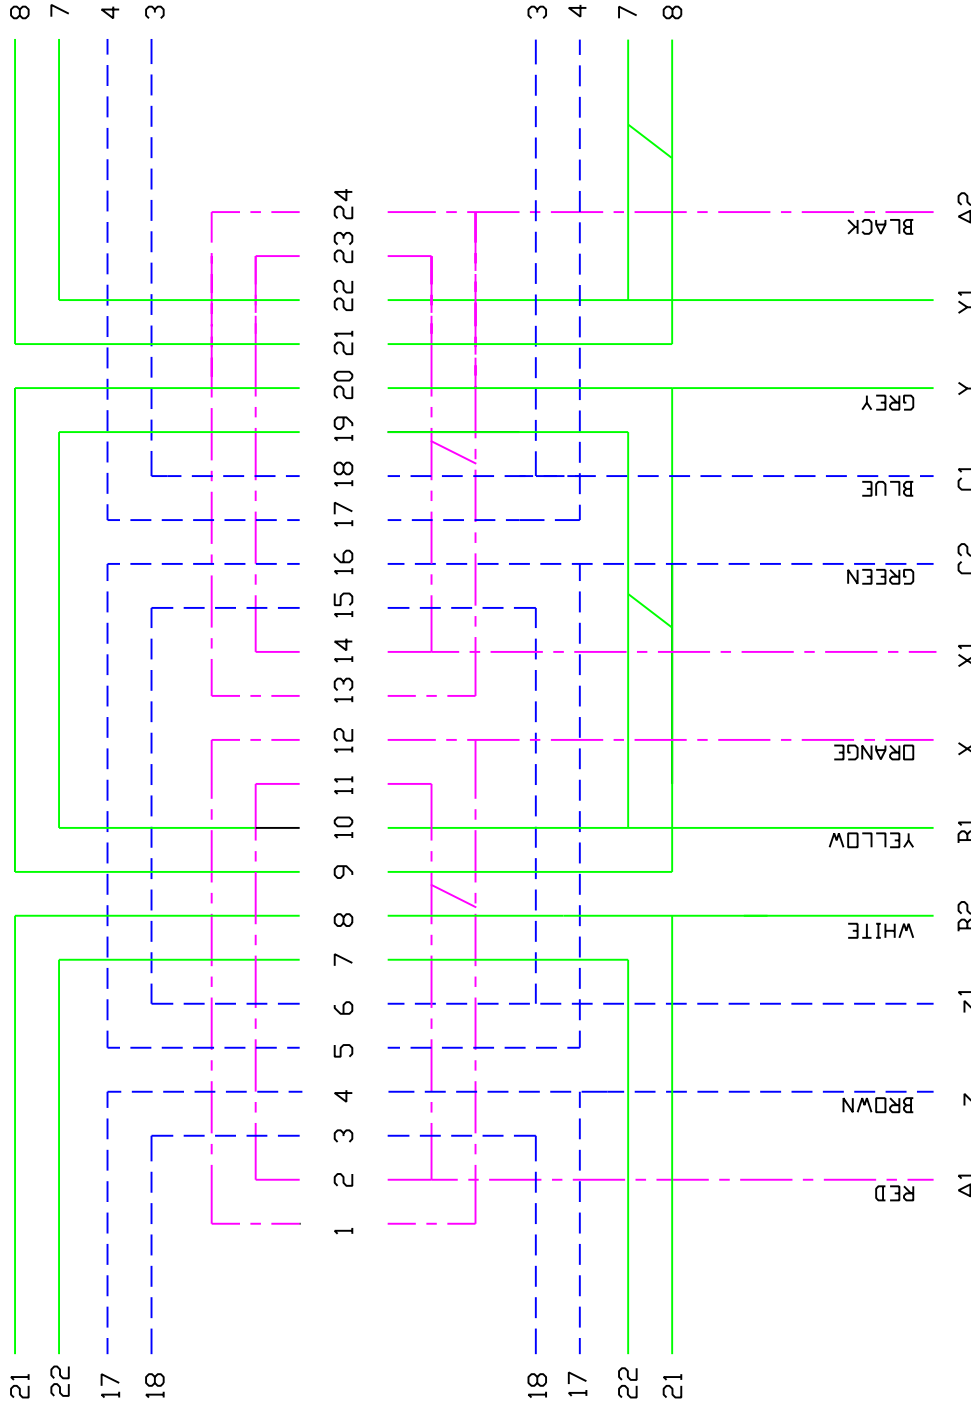


460 VOLT CONNECTION
 JOIN A2 X - BLACK AND ORANGE
 A2 Y - WHITE AND GREY
 C2 Z - GREEN AND BROWN
 POWER TO A1(RED), B1(YELLOW), C1(BLUE)



POINTS X1 Y1 Z1 ARE PERMANENTLY SHORT CIRCUITED

230 VOLT CONNECTION
 SHORT XYZ
 JOIN A1 A2 - RED AND BLACK-POWER
 B1 B2 - YELLOW AND WHITE-POWER
 C1 C2 - BLUE AND GREEN-POWER

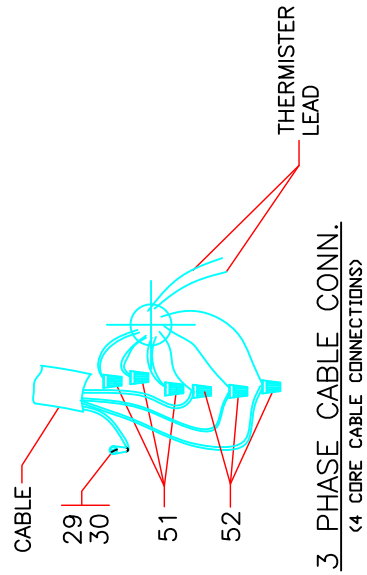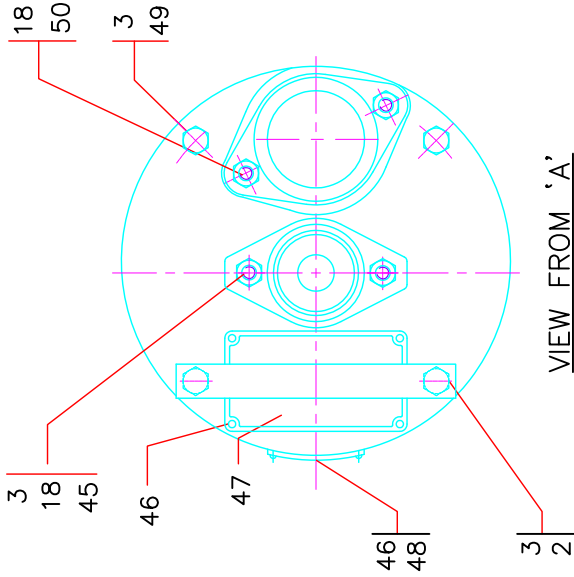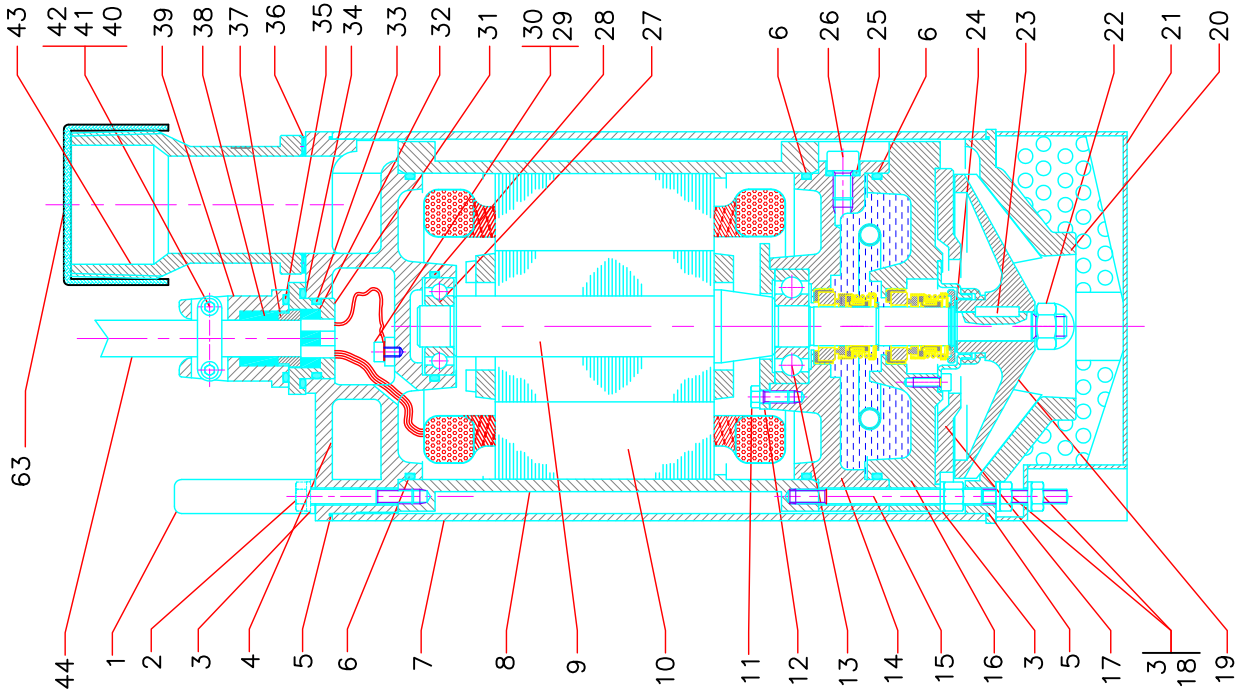


Mody Pumps Inc.
2165 Zanker
Bakersfield, CA 93308, USA
Tel: 661-392-7600 Fax: 661-392-7601
www.modypump.com


MODEL:	M100T/SS/E	MATERIAL:	-	DRN.	V V K	07/01/09
SCALE:	NTS	TITLE:	GENERAL ASSEMBLY DRAWING	CHKD.		
QTY:	1	CODE No.	DW\041\00	APPD.		
1NO.	0	REV.	0			

This copy belongs to Mody Pumps Inc.
and is strictly confidential. Do not circulate
this copy without Mody pumps authorization.

This copy belongs to Mody Pumps Inc. and is strictly confidential. Do not circulate this copy without Mody pumps authorization.

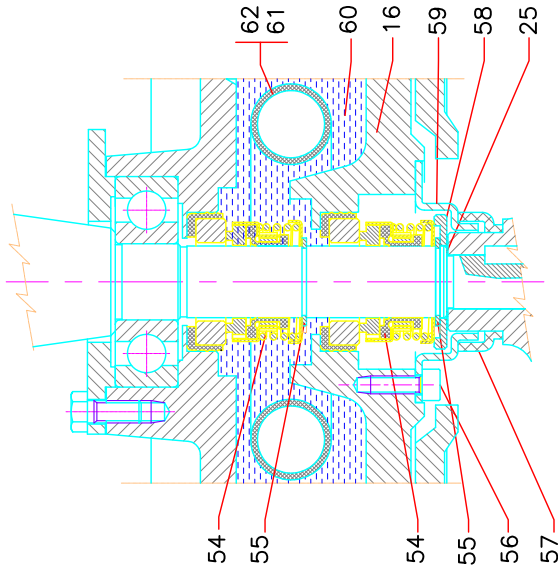

SEALING ARRANGEMENT

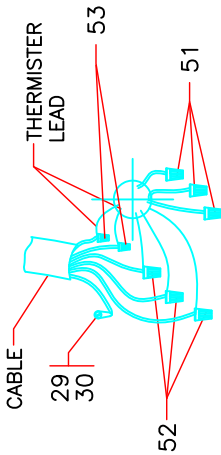

3 PHASE CABLE CONN.
(6 CORE CABLE CONNECTIONS)



NOTE: - ITEMS ARE COMMON FOR ALL MODELS, UNLESS OTHERWISE SPECIFIED.



Mody Pumps Inc.
2166 Zane Court
Mankato, MN 56001 USA
Tel: 651-392-7800 Fax: 651-392-7801
www.modypump.com

MODEL:	M100T/SS/E	MATERIAL:	—	DRN.	V V K	07/01/09
SCALE:	NTS	TITLE:	MATERIAL PARTS FOR GENERAL ASSEMBLY DRAWING	CKD.		
QTY:	1 NO.	CODE No.	DW\041\00	APPD.		
		REV.	0			

PUMP MODELS M100T/100ST/106T/106ST/120T/126T

Ref : Drawing no. DW/041/00

D.NO.	PART NO.	DESCRIPTION	QTY
1	270-017-24	HANDLE	1
2	045-007-24	HEX. HD. BOLT	2
3	700-002-24	WASHER	18
4	035-005-24	TOP BRACKET	1
5	380-084-74	"O" RING	2
6	380-023-74	"O" RING	3
7a	400-001-24	OUTER CASING (M100T/106T)	1
7b	400-002-24	OUTER CASING (M100ST/M106ST)	1
7c	400-003-24	OUTER CASING (M120T/126T)	1
8a	625-001-24	STATOR CASING (M100T/106T)	1
8b	625-002-24	STATOR CASING (M100ST/106ST/120T/126T)	1
9a	480-076-00	ROTOR COMPLETE (M100T/106T)	1
9b	480-071-00	ROTOR COMPLETE (M100ST/106ST/120T/126T)	1
10a	619-002-00	BARE STATOR (M100T/106T)	1
10b	619-062-00	BARE STATOR 575V (M100T/106T)	1
10c	619-004-00	BARE STATOR (M100ST/106ST)	1
10d	619-006-00	BARE STATOR (M120T/126T)	1
10e	619-007-00	BARE STATOR 575V (M120T/126T)	1
11	045-001-24	HEX. HD. BOLT	4
12	037-001-24	BEARING COVER	1
13	020-004-07	LOWER BEARING	1
14	035-074-24	LOWER BEARING BRACKET COMPLETE	1
15	660-034-00	STUD ASSY.	4
16	545-019-24	SEAL HOUSING COMPLETE	1
17	715-001-24	WEAR PLATE	1
18	370-005-24	HEX. NUT	12
19a	300-017-24	IMPELLER M100T/M100ST (50Hz)	1
19b	300-018-24	IMPELLER M100T/M100ST (60Hz)	1
19c	300-088-24	IMPELLER M106T/M106ST (60Hz)	1
19d	300-020-24	IMPELLER M120 (50Hz)	1
19e	300-021-24	IMPELLER M120 (60Hz)	1
19f	300-090-24	IMPELLER M126 (60Hz)	1
20	175-015-24	DIFFUSER	1
21	640-007-24	STRAINER	1
22	365-038-24	DOME NUT	1
23	320-002-22	KEY	1
24	600-009-24	TRIMMING SPACER	3
25	520-002-24	OIL PLUG	2
26	380-001-74	"O" RING	2
27	020-002-07	UPPER BEARING	1
28	380-012-74	"O" RING	1
29	525-007-40	EARTHING SCREW	1
30	740-001-46	CABLE LUG	1
31	235-007-24	CABLE GLAND BASE	1
32	260-016-66	CABLE LEAD GROMMET	1
33	380-005-74	"O" RING	1
34	380-009-74	"O" RING	1
35	380-007-74	"O" RING	1
36	220-003-66	GASKET (OUTLET)	1
37	600-011-24	CABLE GLAND SPACER	1
38	260-034-66	CABLE GROMMET	1
39	230-001-24	CABLE GLAND	1
40	085-003-24	CABLE CLAMP	2
41	370-002-24	HEX. NUT	2
42	525-022-24	PH.PAN HD.SCREW	2

PUMP MODELS M100T/100ST/106T/106ST/120T/126T



Ref : Drawing no. DW/041/00

D.NO.	PART NO.	DESCRIPTION	QTY
43a	405-036-24	OUTLET 2" NPT SS	1
43b	405-009-24	OUTLET 2" HOSE SS	1
43c	405-033-24	OUTLET 2" BSPT SS	1
44a	065-014-79	CABLE 100/106/120/126	50'/20m
44b	065-015-79	CABLE 100ST/106ST (115V)	50'/20m
44c	14/6	CABLE 6 CORE	50'/20m
45	650-004-24	STUD	2
46	465-006-21	RIVET	6
47	350-015-21	NAME PLATE	1
48	635-010-21	ROTATION ARROW	1
49	045-006-24	HEX. HD. BOLT	2
50	650-003-24	STUD	2
51	365-025-00	WIRE NUT CONNECTER	3
52	365-026-00	WIRE NUT CONNECTER	3
53	365-027-00	WIRE NUT CONNECTER	2
54	535-033-00	MECHANICAL SEAL	2
55	080-002-24	CIRCLIP	2
56	525-025-24	PH.PAN HD.SCREW	3
57	590-003-66	SLINGER	1
58	600-076-24	CAP FOR CIRCLIP	1
59	515-010-21	SAND GUARD	1
60	395-005-93	OIL	0.2 ltrs
61	660-110-00	AIR VOLUME COMPLETE (61a & 62)	1
61a	340-004-66	AIR VOLUME	*
62	310-022-32	INSERT FOR AIR VOLUME	*
63	430-034-66	CAP FOR OUTLET	1
64	375-100-74	"O" RING SET	1

Illinois Location:
 (847) 841-7867
 860 Church Rd Elgin, IL 60120

Minnesota Location:
 (651) 758-7867
 330 Mill Bay South Suite
 Afton, MN 55001

PumpSupplyInc.com



LIMITED WARRANTY

We warrant to our immediate customer and to the ultimate consumer that products of our manufacture will be free of defects in material and workmanship under normal use and service for the following time periods, when installed and maintained in accordance with our instructions.

PUMPS: One (1) year from date of installation or (18) months from date of shipment, whichever occurs first. As used herein, "the ultimate consumer" is defined as the purchaser who first uses the product after its initial installation or, in the case for product designed for non-permanent installation, the first owner who uses the product. It is the purchaser's or any sub-vendor's obligation to make known to the ultimate consumer the terms and conditions of this warranty. This warranty gives you specific legal rights, and there may also be other rights which vary from state to state. In the event the product is covered by the Federal Consumer Product Warranties Law (1) the duration of any implied warranties associated with the product by virtue of said law is limited to the same duration as stated herein, (2) this warranty is a LIMITED WARRANTY, and (3) no claims of any nature whatsoever shall be made against us, until the ultimate consumer, his successor, or assigns, notifies us in writing of the defect, and delivers the product and/or defective part(s) freight prepaid to our facility or nearest authorized service station. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply. **THE SOLE AND EXCLUSIVE REMEDY FOR BREACH OF ANY AND ALL WARRANTIES WITH RESPECT TO ANY PRODUCT SHALL BE TO REPLACE OR REPAIR AT OUR ELECTION, FOB POINT OF MANUFACTURE OR AUTHORIZED REPAIR STATION, SUCH PRODUCTS AND/OR PARTS AS PROVEN DEFECTIVE. THERE SHALL BE NO FURTHER LIABILITY, WHETHER BASED ON WARRANTY, NEGLIGENCE OR OTHERWISE.**

Unless expressly stated otherwise, guarantees in the nature of performance specifications furnished in addition to the foregoing material and workmanship warranties on a product manufactured by *Mody*, if any, are subject to laboratory tests corrected for field performance. Any additional guarantees, in the nature of performance specifications must be in writing and such writing must be signed by our authorized representative. Due to inaccuracies in field testing if a conflict arises between the results of field testing conducted by or for user, and laboratory tests corrected for field performance, the latter shall control. Components or accessories supplied by us but manufactured by others are warranted only to the extent of and by the terms and conditions of the original manufacturer's warranty.

RECOMMENDATIONS FOR SPECIAL APPLICATIONS OR THOSE RESULTING FROM SYSTEMS ANALYSES AND EVALUATIONS WE CONDUCT, WILL BE BASED ON OUR BEST AVAILABLE EXPERIENCE AND PUBLISHED INDUSTRY INFORMATION. SUCH RECOMMENDATIONS DO NOT CONSTITUTE A WARRANTY OF SATISFACTORY PERFORMANCE AND NO SUCH WARRANTY IS GIVEN.

This warranty shall not apply when damage is caused by (a) improper installation, (b) improper voltage, (c) lightning, (d) sand or other abrasive materials, (e) scale or corrosion build-up due to excessive chemical content. Any modification of the equipment will also void the warranty. We will not be responsible for loss, damage or labor cost due to interruption of service caused by defective parts. Neither will we accept charges incurred by others without our prior written approval. This warranty is void if our inspection reveals the product was used in a manner inconsistent with normal industry practice and/or our specific recommendations. The purchaser is responsible for communication of all necessary information regarding the application and use of the product. **UNDER NO CIRCUMSTANCES WILL WE BE RESPONSIBLE FOR ANY OTHER DIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOST INCOME, LABOR CHARGES, DELAYS IN PRODUCTION, IDLE PRODUCTION, WHICH DAMAGES ARE CAUSED BY ANY DEFECTS IN MATERIAL, AND/OR WORKMANSHIP AND/OR DELAYS IN SHIPMENT. THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

No rights extended under this warranty shall be assigned to any person, whether by operation or otherwise, without our prior written approval.

Mody Pumps Inc.: 2166 Zeus Court, Bakersfield, CA 93308 Tel.: (661) 392-7600 Fax: (661) 392-7601