

New O-Ring Installation Tool for AODDampenerTM Automatic Valve

1 September 2017

The automatic valve in the non-wetted housing of the AODDampener contains three rubber O-rings located in positions 1, 3 and 5 (Figure 1). It is recommended that the automatic valve O-rings be replaced with each diaphragm replacement. BLACOH now offers a custom tool designed specifically for installing these O-rings.


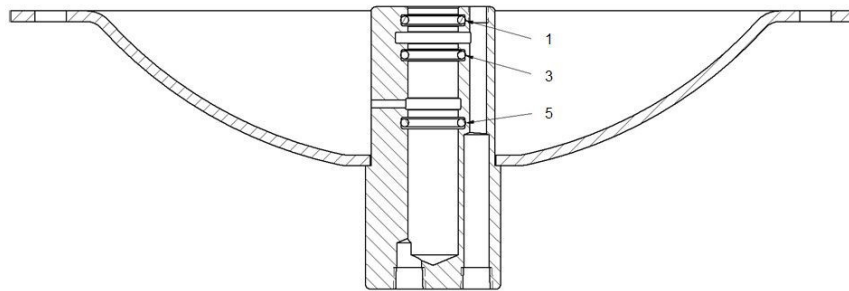


Figure 1: AODDampener Automatic Valve O-Rings

The new AODDampenerTM O-Ring Installation Tool (Figure 2) has been engineered to properly install O-rings one at a time in the correct position, improving efficiency and minimizing system downtime. Economical and easy to use, the O-Ring Installation Tool is available in two sizes and ready for immediate delivery.


AODDampener Model	O-Ring Tool Part No.
AOD-10_	AD10-032
AOD-15_, AOD-20_	AD00-032

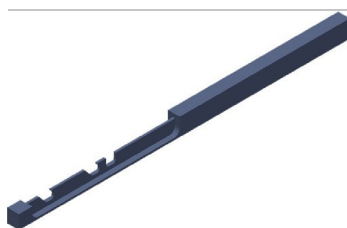

O-Ring Tool Slide



O-Ring Tool Body

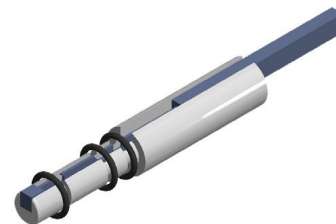

Assembled O-Ring Tool

Figure 2: AODDampener Automatic Valve O-Ring Installation Tool



Installing automatic valve O-rings using a pick, or any instrument other than this specifically designed tool, is not recommended as it may result in improper placement and/or damage to O-rings. Refer to the *O-Ring Installation Tool Operation Instructions* for complete details. Always read and observe all safety warnings and instructions in the *AODDampener Installation and Operation Manual* before dampener installation, operation, or repair.

For more information or to place your order, call the Blacoh Sales Team at 951.342.3100 or email sales@blacoh.com.